



# Orcad Pspice H1

Lasse Kaae  
2014



# Cadence installation



- Cadence version 16.6 kan installeres fra eksternt HD eller CD, der udleveres.
- **Husk** også at checke for opdateringer til dit grafik kort på leverandørens hjemmeside.



# Cadence installation



# Cadence installation




- Derefter installere "Product installation"
- Der skal indtastes en server sti til licens serveren, tilkald mig!!!
- [5280@vihcahot01.global.local](mailto:5280@vihcahot01.global.local)
- Hvis stien skal indtastes efter installation, benyt "kør som admin"



# Indtast licens sti

Cadence License Client Configuration (System Level)

## License Path



Cadence applications need to check out licenses from a Cadence license server in order to run. Specify the port and hostname information for your license server using the port@host format. Use semi-colon to specify multiple license servers as follows:

port1@host1;port1@host2;port1@host3

If you have a fault-tolerant or triad license server, specify the port@host information for the three servers separated by a comma as follows:

port1@host1,port1@host2,port1@host3

License Path

5280@vihcahot01.global.local

Help Next Cancel